



Enjoy The View™

BAY & BOW WINDOWS – INSTALLATION INFORMATION

Farley Bay and Bow windows are pre-assembled in our plant with either unfinished wood laminate or white laminate heads and seats.

Our standard Bays and Bows will require the exterior of the head and seat to be properly flashed and /or sealed at exterior perimeter to prevent any moisture from entering the window envelope.

Our deluxe Bays and Bows are standard with a cable support system that will aid in the installation process. Additional support may be needed in some cases due to local building codes. The head and seat of the deluxe Bays and Bows are pre-capped on the exterior for added protection. Depending on the consumer choice, heads and seats may either be paint or stain grade.

It is solely the responsibility of the builder, installer, subcontractor or homeowner to protect the interior and exterior from excessive contact with harsh chemical solvents, construction material contamination and any moisture. All heads and seats must be treated as an outside wall and therefore, *proper moisture barrier and insulation* must be used according to local building codes.

- Check to make sure that the unit is square, jambs are straight and plumb, and that the sill is level.
- Check interior diagonal measurements from each corner of the frame. Adjust as necessary by applying shims to the corners 4" to 6" from the sill and head jamb.
- Check to see that all operating windows are opening and closing properly before the unit is finally set into place. Bays and Bows must be properly supported, square, level and plumb. Failure to do so may void parts of the Farley warranty coverage.

All Bays and Bows must be fully inspected before installation.

*Please note: Farley will not be responsible for any damage after units are installed.

Note: Regional standard practices, environmental conditions and codes may vary. Identify and follow local regulations and standard practices when they exceed the enclosed procedures. The responsibility for compliance is yours, the installer, inspector and owner (s).